


# SPCVC1 Sprocket Guard

## Sprocket Guard Installation.

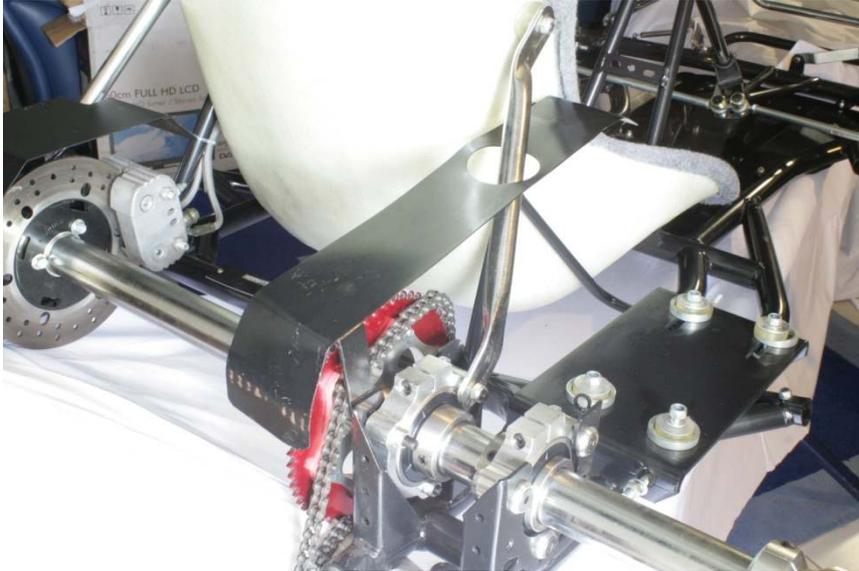

**Sprocket Guard** 1 piece \*FIT KIT not included – you should not require any additional bolts if a seat and axle is already fitted to your chassis.

- a. Remove the M8x50 bolt at the top rear of the centre bearing.
- b. Fit the sprocket guard with the hole facing forward. The bracket should line up with the seat mount hole on the left side seat upright. If it does not, simply bend the sprocket guard to match.
- c. Re-install the M8x50 bolt.